

Table of Contents

SECTION 1 OVERVIEW	1-1
Conveyor Layouts	1-1
New Construction	1-1
Extensions or Modifications	1-1
Conveyor Manuals	1-1
Using this Manual	1-2
Component Details Section	1-2
Assembly and Installation Section	1-2
Start-up and Troubleshooting Section	1-2
Maintenance Section	1-2
General Information Section	1-2
Component Glossary	1-3
Typical System Configurations	1-7
Mini Drive with End Unit	1-7
Mini Drive with Idler Unit	1-8
Mini Drive with Transfer Drive	1-9
Front Drive with End Unit	1-10
Front Drive with Idler Unit	1-11
Front Drive with Transfer Drive	1-12
Transfer Drive with End Unit	1-13
Transfer Drive with Idler Unit	1-14
Multiple Transfer Drives	1-15
Cantilever Drive with End Unit	1-16
Cantilever Drive with Idler Unit	1-17
SECTION 2 COMPONENT DETAILS	2-1
Front Drive T350 - T750	2-1
Front Drive T1000	2-18
Mini Drive T250 - T750	2-34
Mini Drive T1000	2-43
Transfer Drive T350 - T750	2-52
Intermediate Drive T250 - T750	2-69
Intermediate Drive T1000	2-77
End Drive T350 - T750	2-85
Cantilever Drive T250 - T750	2-95
Cantilever Drive T1000	2-101
End Unit T250 - T750	2-107
End Unit T1000	2-111
End Piece T250 - T750	2-115
Idler Unit T250 - T750	2-119
Idler Unit T1000	2-127

Table of Contents

Idler Unit Stainless US T250 - T750	2-135
Idler Unit Stainless US T1000	2-142
Connecting Part 1m Closed Stainless US T250 - T750	2-149
Connecting Part 1m Closed Stainless US T1000	2-154
Connecting Part 2m Closed Stainless US T250 - T750	2-159
Connecting Part 2m Closed Stainless US T1000	2-164
Connecting Part 2m Closed T250 - T750	2-169
Connecting Part 2m Closed T1000	2-174
Connecting Part 3m Closed T250 - T750	2-179
Connecting Part 2m Open T250 - T750	2-184
Connecting Part 3m Open T250 - T750	2-187
Drip Pan 1m T250 - T750	2-190
Bend Unit T250 - T750	2-192
Bend Unit T1000	2-197
Pivot Unit T250 - T750	2-202
Pivot Unit T1000	2-207
Drip Oiler T250 - T750	2-212
Top Oiler T250 - T750	2-216
Top Oiler T1000	2-221
Tandem Oiler T250 - T750	2-226
Tandem Oiler T1000	2-231
Drip Oiler Replacement Solenoid T250 - T1000	2-236
Bolt-In Tensioner T250 - T1000	2-237
Conveyor Chain T250 - T1000	2-241
Closing Rod T250 - T1000	2-242
Closing Rod Grub Screw T500 - T1000	2-243
Security Elements T250 - T1000	2-244
Floor Supports T250 - T1000	2-245
Extruded Diverter 60-in T350 - T1000	2-250
Guide Unit T250 - T750	2-253
Drip Canopy T250 - T1000	2-256
ChainKeeper T250 - T1000	2-257
Spray Cabinet and Pump Cart T250 - T1000	2-258
Accessories	2-259
Accessory Pack T250 - T1000	2-259

Table of Contents

Stober Gearbox Coupling Components T250 - T1000	2-260
Stober Gearbox Tensioning Tool T250 - T1000	2-261
Chain Lubricant T250 - T1000	2-262
Transfer Complete 180mm (7-in) T250 - T750	2-263
Transfer Complete 180mm (7-in) T1000	2-264
Curve Conveyor User Manuals T250 - T1000	2-265
SECTION 3 ASSEMBLY AND INSTALLATION	3-1
Preparing Equipment for Installation	3-1
Converting Drives from Left Hand to Right Hand Configurations	3-2
Setting Sprocket Width	3-5
Converting Intermediate Top Drives to Bottom Drives	3-9
Setting Components to Downstream Equipment	3-11
Joining Components	3-13
Standard Thread Plates	3-13
Special Thread Plates	3-14
Locating Components	3-15
Modifying Connecting Part Length	3-16
Directional Components	3-17
Pivot Units	3-17
Installing Chain	3-18
Pulling Chain	3-19
Joining Chain Sections	3-20
Moving Chain Slack	3-21
Locating Tensioner Components	3-22
Setting Chain Tension	3-23
Floor Support Installation	3-24
Floor Supports at Standard Locations	3-24
Floor Supports at Non-standard Locations	3-25
Suspending Components	3-26
Drip Oiler Installation	3-27
Drip Oiler Assembly	3-27
Routing Supply Lines	3-28
Correct Orientation for Installation	3-29
Drip Oiler Wiring and Adjustment	3-30
Initial Setting of Discharge Wheels and Transfers	3-31
Attaching Gearboxes and Motors	3-32
Final Setting of Discharge Wheels and Transfers	3-33
Diverting Eggs	3-35
Extruded Diverter Installation	3-35

Table of Contents

Guide Unit Installation	3-40
Final Assembly Considerations	3-44
SECTION 4 START-UP AND TROUBLESHOOTING	4-1
System Start-up	4-1
Personal and Equipment Safety	4-1
Verifying Installation	4-1
Start-up Checklist	4-1
Jogging the Conveyor	4-2
Initial Start-up	4-3
Commissioning the System	4-3
Break-in Inspection Table	4-4
Troubleshooting Table	4-5
SECTION 5 MAINTENANCE AND SPARE PARTS	5-1
Inspection Schedule	5-1
Preventive Maintenance	5-1
Critical Spares Overview	5-3
Critical Spares All Widths	5-4
Critical Spares T250	5-5
Critical Spares T350	5-6
Critical Spares T500	5-7
Critical Spares T750	5-8
Critical Spares T1000	5-9
Electrical Specifications	5-10
Drip Oiler Solenoids	5-10
Motors (nameplate data)	5-10
Mechanical Specifications	5-10
Conveyor Speed (ft/min.)	5-10
Conveyor Capacity (cases/hr)	5-11
Inclines/Declines (max. angles)	5-11
Bend Units (standard/custom angles)	5-11
Lubricants (approved alternates)	5-11
Gearboxes (oil levels)	5-11
Recommended Tool List	5-12
Materials of Construction	5-12
Component Replacement	5-13
General	5-13

Table of Contents

Conveyor Chain	5-13
Drive Components	5-13
Motors and Gearboxes	5-14
Tips and Tricks	5-15
Installation	5-15
Maintenance	5-15
Motors and Gearboxes	5-15
Spares	5-15
Conveyor Chain	5-16
Chain Lubricant (Oil)	5-16
SECTION 6 GENERAL INFORMATION	6-1
Conveyor Layout Sketches	6-1
Sketching Houses and other Buildings	6-1
Sketching the Conveyor Path	6-3
Sketching Offsets	6-5
Sketching Elevations	6-6
Avoiding Obstacles	6-7
Road Clearance	6-8
Determining Bend Angles	6-9
Understanding Layouts	6-11
Layout Acceptance Form (LAF)	6-11
Component Spacing Chart	6-13
System Overview	6-15
Locating Components	6-17
Multiple Conveyor Systems	6-19
Layout Correspondence	6-21
Lubing System Contact Information	6-22
OEM Contact Information	6-23